

# DOMINO

D 729 115- BC 1150x650x25



D 729 127- BC 1270x650x25

D 729 150- BC 1500x650x25



D 729 115- SM 1150x650x25

D 729 127- SM 1270x650x25


D 729 150- SM 1500x650x25

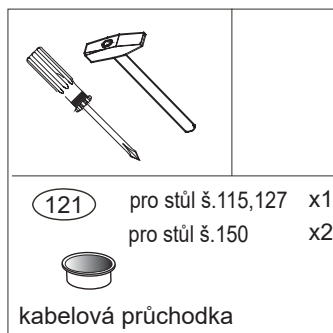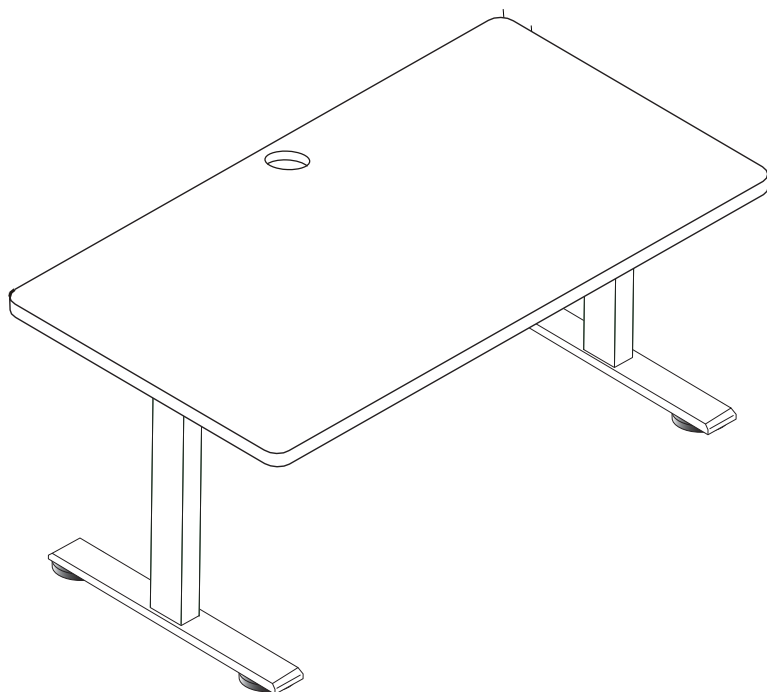


1/1

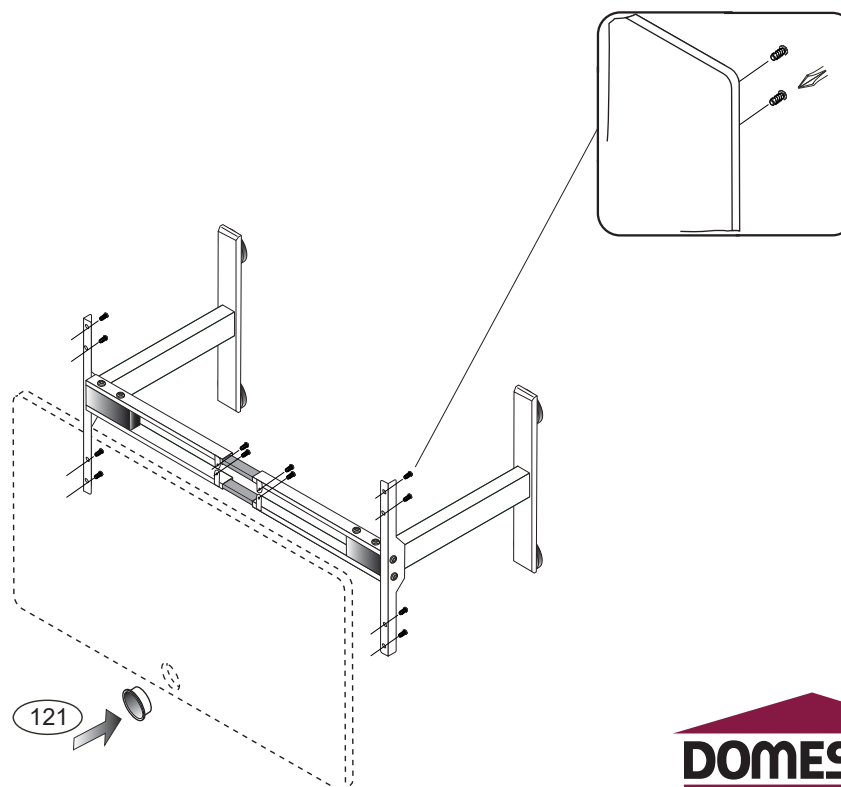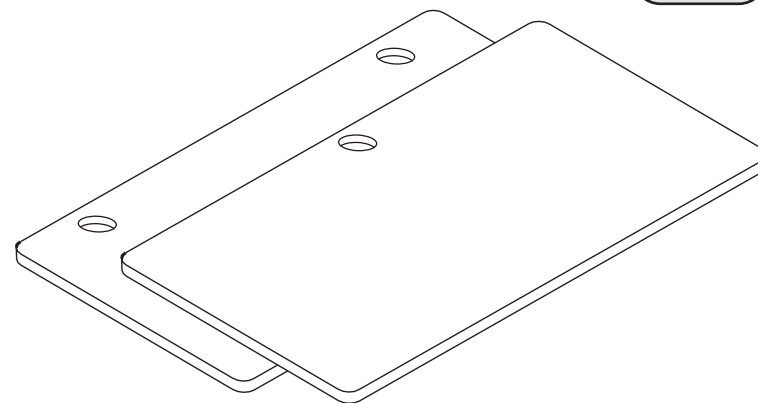


1

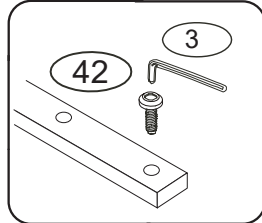


2

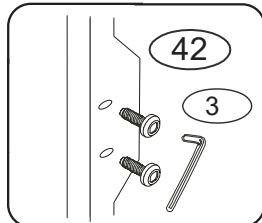


3

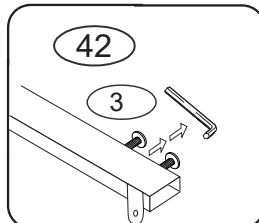


6

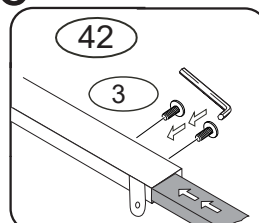




7

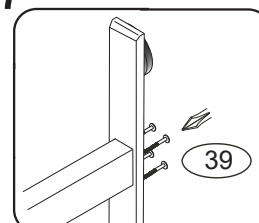


Povolte šrouby, povytáhněte středové tyče dle potřeby. Šrouby opět dotáhněte.

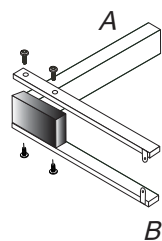


B

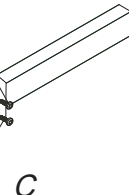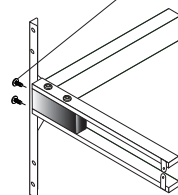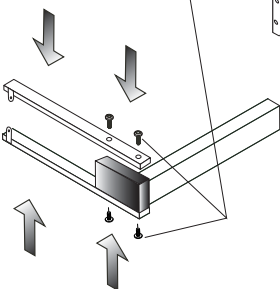


C

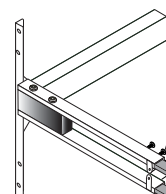

D


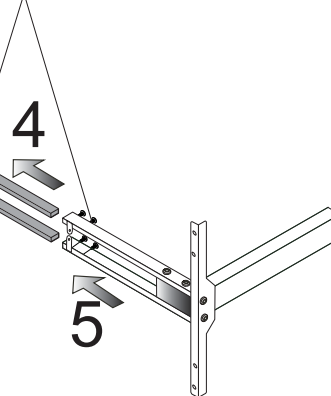


5

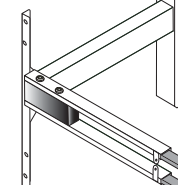

E

8

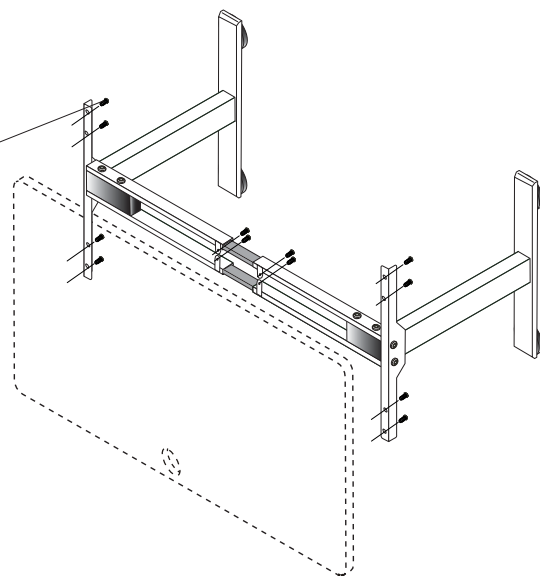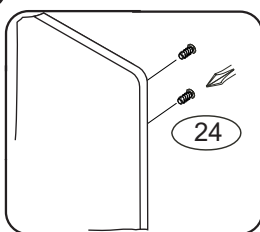

9

